
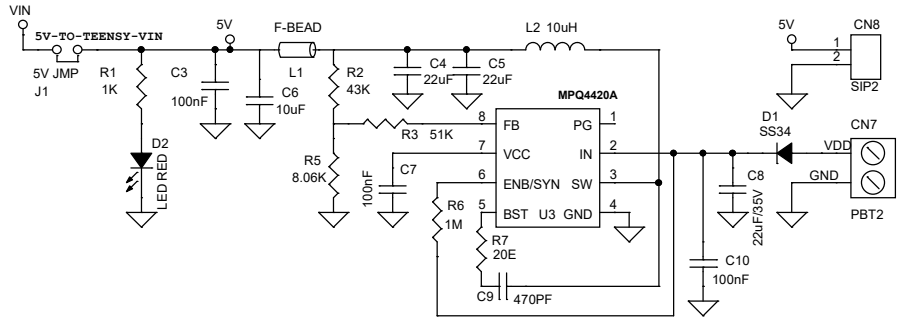
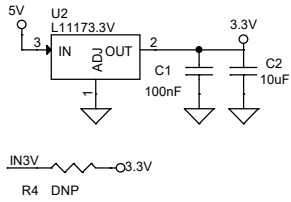


GD	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	VIN	VINQ							
	GND																																				
00	00/RX1/CS1/CRX2/PWM																																				
01	01/TX1/MISO1/CTX2/PWM																																				
02	02/OUT2/PWM																																				
03	03/LRCLK2/PWM																																				
04	04/BCLK2/PWM																																				
05	05/IN2/PWM																																				
06	06/OUT1D/PWM																																				
07	07/RX2/OUTA1/PWM																																				
08	08/TX2/IN1/PWM																																				
09	09/OUT1C/PWM																																				
10	10/CS/MQSR/PWM																																				
11	11/MOSI/CTX1/PWM																																				
12	12/MISO/MQSL/PWM																																				
13																																					
14																																					

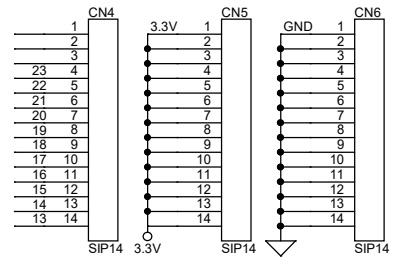

5 4 3 2 1